

LAMP® SOFT CLOSING MECHANISM FOR INSET RECEDING DOOR: INSTALLATION INSTRUCTION



IF-102S(SINGLE-TYPE) IF-102W(DOUBLE-TYPE)
IF-H102S(SINGLE-TYPE) IF-H102W(DOUBLE-TYPE)

Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

ABOUT THE PRODUCT

- This product is a set of stays and hinges for an inset receding door.

SPECIFICATIONS

TYPE	IF-102S	IF-102W	IF-H102S	IF-H102W
DOOR WIDTH	less than 1,200 mm			
DOOR THICKNESS(T)	15-20 mm		18-30 mm	
TORQUE MOMENTc	1.96-6.86N·m (20-70kgf·cm)	3.9-13.7N·m (40-140kgf·cm)	1.96-6.86N·m (20-70kgf·cm)	3.9-13.7N·m (40-140kgf·cm)

Note: ※¹ Door height × 1/2 × door weight.

DIMENSIONAL INFORMATION

	IF-102S & IF-102W		IF-H102S & IF-H102W	
	B	RECOMMENDED DOOR HEIGHT	B	RECOMMENDED DOOR HEIGHT
AL-78-14	263.7 + T ※ ²	298.7 + T	260.9 + T	295.9 + T
AL-78-16	314.5 + T	349.5 + T	311.7 + T	346.7 + T
AL-78-19	390.7 + T	425.7 + T	387.9 + T	422.9 + T
AL-78-24	517.7 + T	552.7 + T	514.9 + T	549.9 + T

※² T=Door thickness (mm)

PARTS REQUIRED PER CABINET

① Bracket	② AL-78 RAIL	③ DR-19-B2 ROLLER	④ SC-107-13 INSERT
⑤ F-15 SLIDER	⑥ GUARD PLATE(※ ³)	⑦ Screw-A(M4 × 8)	
		⑧ Screw-B(M3.5 × 6)	
		⑨ Screw-C(3.5 × 16, Bind tapping)	
		⑩ Screw-D(3.5 × 16, oval tapping)	
⑪ 230-C26/19T HINGE	⑫ H230-C26/26T HINGE	⑬ 230-P4W-32T MOUNTING PLATE	⑭ NSDX35(L/R)K SOFT DOWN STAY
⑮ Caution sticker	※ ³ In case of IF-102S, (IF-H102S) lower guard plates are attached.		

	IF-102		IF-H102	
	IF-102S	IF-102W	IF-H102S	IF-H102W
①	2			
②	1 pair 14", 16", 19" or 24"			
③	2			
④	2			
⑤	2			
⑥	4			
⑦	14			
⑧	6			
⑨	36			
⑩	4			
⑪	2	2	-	-
⑫	-	-	2	2
⑬	2			
⑭	1	L × 1, R × 1	1	L × 1, R × 1

Note: Use the hinge H230-C26/26T ⑫ only with IF-H102

FOR YOUR SAFE WORK AND CORRECT INSTALLATION


Meaning of symbols

	Warning Caution		Prohibited		Required
--	--------------------	--	------------	--	----------

⚠ Caution : If not followed injury or damage may result.


- ⓘ This is a part for furniture fittings. After installation, make sure to test the finished product thoroughly to ensure that it is well-functioning and safe.
- ⊘ Do not try to use this product for anything other than its original purpose. Do not use the parts for applications that are out of specification.
- ⓘ Make sure to follow the designated dimensions, specifications, and horizontal/vertical angles. Make sure that the cabinet is not warped, since it may affect the movement of the door.
- ⓘ Recommended ambient temperature range is 0 °C - 40 °C .
- ⓘ Make sure to check the screws for slack at regular intervals (one month from first usage, half a year and then one time every year is recommended).
- ⓘ Affix attached caution sticker onto the door.

INSTALLATION DRAWING (EXAMPLE)

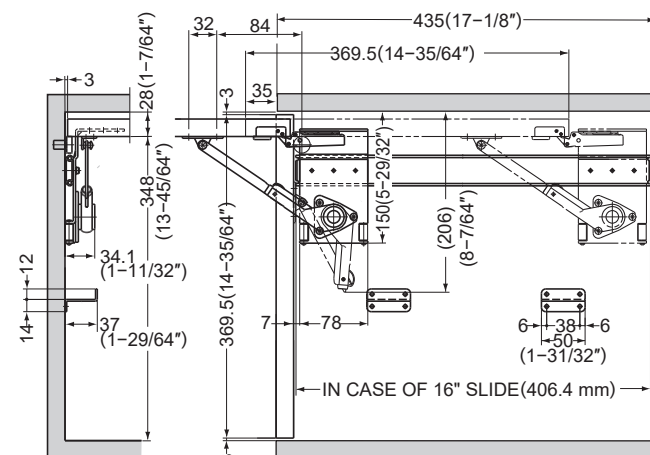


ASSEMBLY

1 Parts Assembly on Cabinet

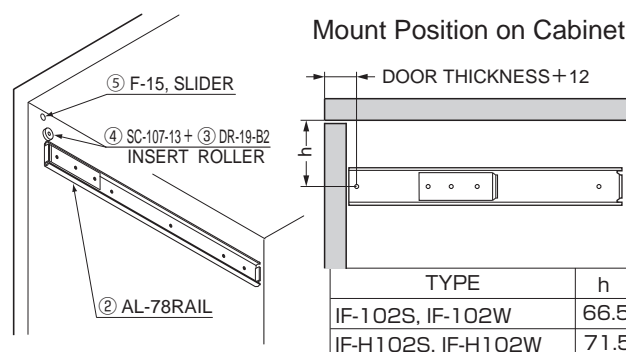

CABINET AND DOOR FABRICATION

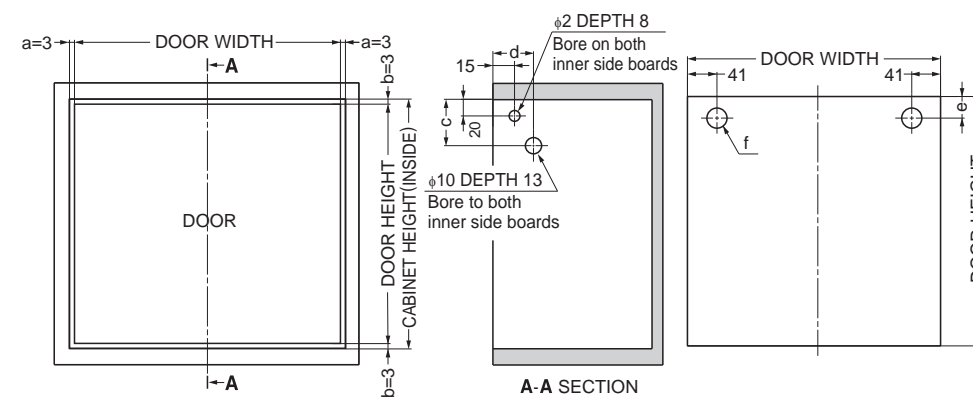


TYPE	c	d	e	f
IF-102S, IF-102W	37.5	9.5+Door thickness	22.5	35 depth 11
IF-H102S, IF-H102W	43.6	9.5+Door thickness	25	40 depth 15


Cut the door so that there is a 3 mm gap between the cabinet and the door. (a & b gap).

Drill 2 mm dia. and 8 mm depth holes inside of the cabinet.

2 Bracket Installation

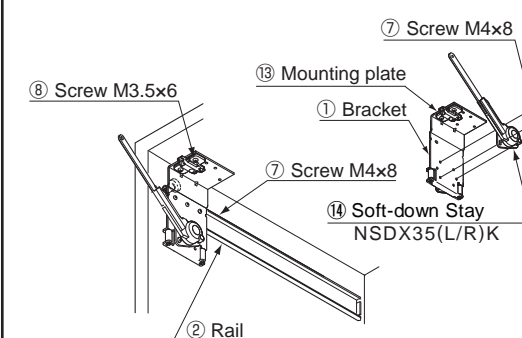


3 Parts Assembly on Door

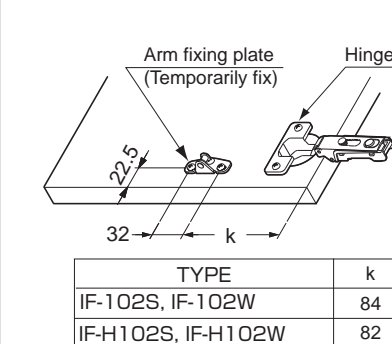


4-1 Door Mounting


- Assemble the hinges to the mounting plate.

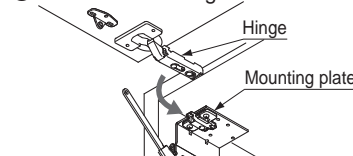

- Fasten arm of Soft-down stay.

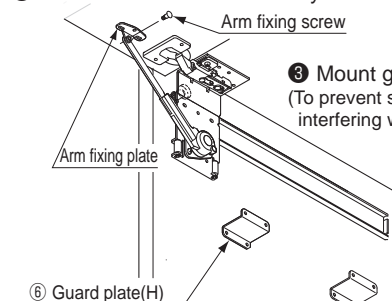


- Mount guard plates. (To prevent stored articles from interfering with moving parts ※⁴)

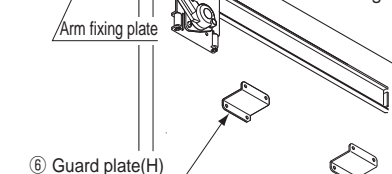


※⁴ If the guard plates are not enough to avoid interference install a middle plate.

4-2 Door Mounting


- Assemble the hinges to the mounting plate.

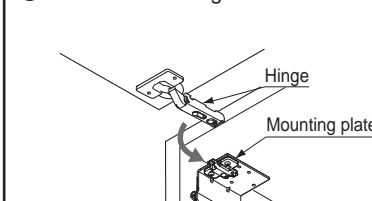

- Fix arm of Soft-down stay.

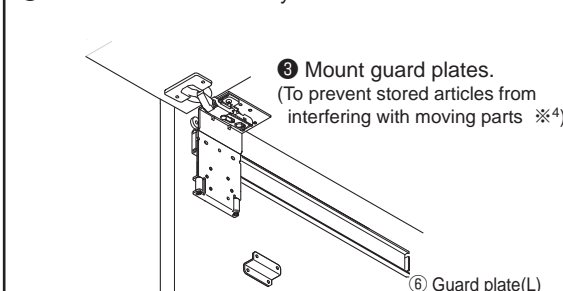


- Mount guard plates. (To prevent stored articles from interfering with moving parts ※⁴)

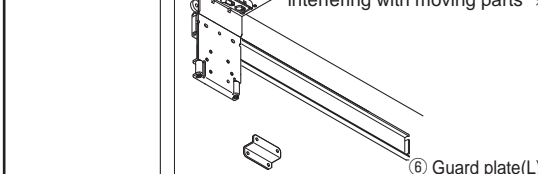

※⁴ Mount guard plate(L) without stay. Mount guard plate(H) on the side with the stay. If the guard plates are not enough to avoid interference install a middle plate.

5 Door Adjustment

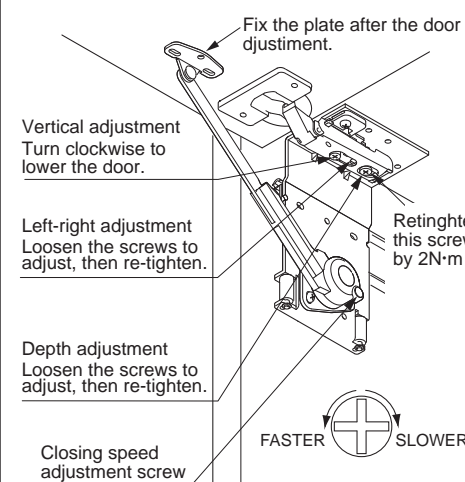

⚠ Caution
When installing two stays, turn the two screws equally.

SUGATSUNE KOGYO CO.,LTD
Tokyo, JAPAN
Phone: +81 (0)3 3866 2260 E-mail:export@sugatsune.co.jp

SUGATSUNE KOGYO (UK) LTD
Reading, UK
Phone: +44 118 9272 955 E-mail:sales@sugatsune.co.uk

SUGATSUNE EUROPE GmbH
Düsseldorf, GERMANY
Phone: +49 211 53812900 E-mail:sales@sugatsune.eu
ISO9001(Japan Offices and Sugatsune America) and ISO14001(Chiba Production division and Logistics center), certified.

SUGATSUNE SHANGHAI Co., LTD
Shanghai, CHINA
Phone: +86 21 3632 1858 E-mail:lamp@sugatsune.com.cn

Guangzhou, CHINA
Phone: +86 20 6639 3552 E-mail:lamp@sugatsune.com.cn

SUGATSUNE KOGYO INDIA PRIVATE LIMITED
Mumbai, INDIA
Phone: +91 22 28314490/91 E-mail:sales@sugatsune.in

SUGATSUNE AMERICA, INC
California, USA
Phone: +1 310 329 6373 E-mail:sales@sugatsune.com

Chicago, USA
Phone: +1 312 461 1081 E-mail:chicagoshowroom@sugatsune.com.

SUGATSUNE CANADA, INC.
Phone: +1 514 312 5267 E-mail:support@sugatsune.ca