



## HAMMAM VANITY SUPPORT INSTALLATION INSTRUCTIONS

### Installation Considerations

*Every successful vanity installation begins with proper planning and action. Do not wait until the last minute to order your lavatory support, fasteners, or adhesives for installation. Make sure that all aspects of the support substructure are considered and discussed to ensure that your vanity installation will be smooth and that your lavatory support will be sufficient.*

*Note that this installation document should not be considered a specific recommendation for your particular application. Federal Brace cannot provide installation guidelines to meet the particulars of every application. This document should be regarded as a help sheet that provides considerations about the general characteristics of a particular type of support and installation.*

### Characteristics of the Hammam Lavatory Support Bracket

Our Hammam lavatory Brackets are designed to provide the support strength necessary to wall mount a standard vanity in a bathroom setting. The material thickness of the Hammam lavatory Mounting Bracket is 1/4" with 1/2" support arm. The

Hammam Support comes in a black powder coat or stainless steel. Holes along the length of the vertical plate attach to the side of your stud, leaving only the arm exposed to support the vanity.

### Considerations when Installing Hammam Lavatory Mounting Brackets

Whenever using the Hammam Brackets, be aware that these supports are installed pre-drywall or other wall material. Fasteners must be installed into wood studs providing 1.75" of "biting" material. This will provide secure fastening of the brackets. The 48" tall Hammam Vanity support is designed to rest on the wall plate while the 24" tall Hammam lets you pick the mounting height. It is essential to make sure that each support bracket is mounted at the same height to allow for level support of your vanity.


The Hammam is designed to use multiple brackets to support a single vanity. You should place one bracket on every stud for the length of the vanity. Mark pilot hole location and drill them using a bit that is smaller than the fasteners and attach the bracket

to the substructure. Make sure that when you fasten the bracket that you check for level in all directions. The brackets should be straight up and down and be level across the top flange as well as down the top flange. This will give the best possible support result to your lavatory.

You should position the Hammam Lavatory Support Brackets at such a height that it places your vanity at the desired height. Standard counter height is 35". Once the brackets are in place, you will install your wall material cutting out around the arm extensions. Just before installation of your lavatory, you will want to apply adhesive or silicone to the top of the bracket to adhere it to the vanity.

The final step is to enjoy your work and your new bathroom lavatory! We are thankful that you chose to support your beautiful vanity with Federal Brace brackets. We would be grateful if you would send us images of your new bathroom and our brackets under your lavatory. We enjoy seeing Federal Brace supports at work.

Also, know that the highest compliment Federal Brace can be given is a reference from our customers to friends and family. If you have enjoyed your buying experience with Federal Brace, please let someone know. Please let someone know.

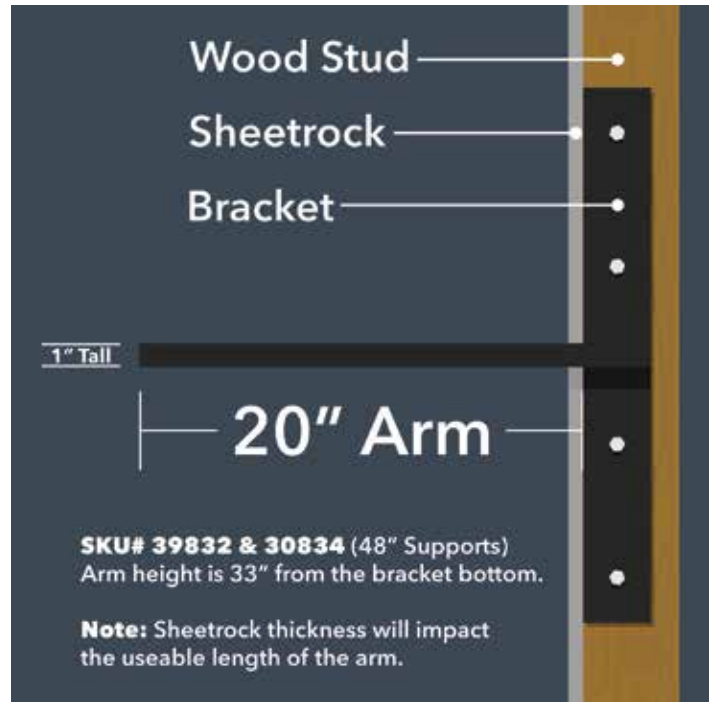

For any questions or comments please to contact us by email at [customer.service@federalbrace.com](mailto:customer.service@federalbrace.com) or by phone at (877) 353-8899. If you are a visual learner, check out our installation videos on our YouTube channel Don't forget to share your projects with your new Federal Brace brackets on Twitter and Instagram, just tag us @FederalBrace. Like us on Facebook, and check out our boards on Pinterest for more home improvement/decor and DIY project ideas.

