


REV·A·TRAYS

INSTALLATION INSTRUCTIONS

6621 SERIES - Full Round

6221 SERIES - "D" Shape Pantry

6421 SERIES - Kidney

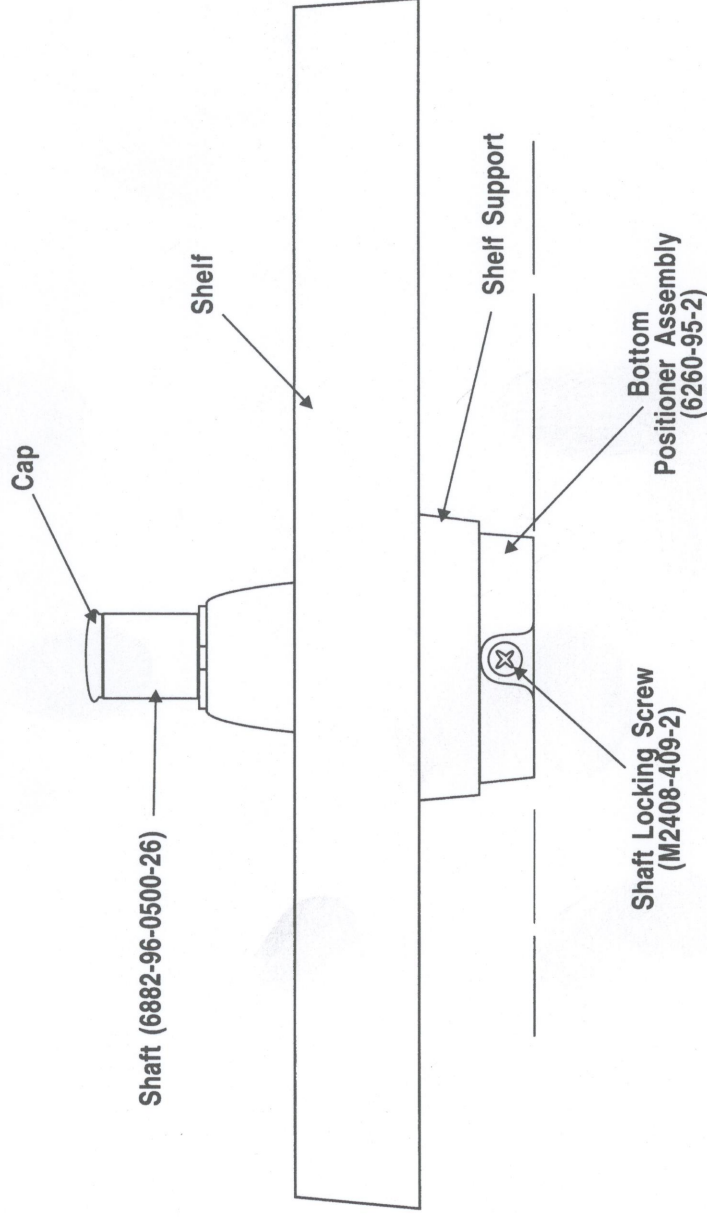

1. Locate the bottom positioner assembly on the cabinet floor so that the shelf will have at least 3/8" side clearance all around, and the position and location of the positioner base will determine the positioning of the shelf on pantry and kidney trays.
2. Pilot drill (1/8" diameter) holes and fasten the positioner assembly with four (4) 3/4" x 8 oval head wood screws (F1208-13-2).
3. Insert the shaft into the positioner assembly and tighten the locking screw. Place the shelf into the shaft.

REV·A·SHELF®
Your Worldwide
STORAGE ORGANIZING
Accessory Source!

2409 Plantside Drive • Jeffersontown, KY 40299
800-626-1126 • FAX 502-491-2215