


IMPORTANT: Place template on high edge of door bevel.

TEMPLATE


For Installing
UltraLatch® Locksets

- 3** Measure and Mark Exact Center of Door Thickness for 1" (25mm) Hole



- 5** Drill 1" Hole in Center of Door Thickness, 2" (51mm) in Depth

Part #: LPUXAY3

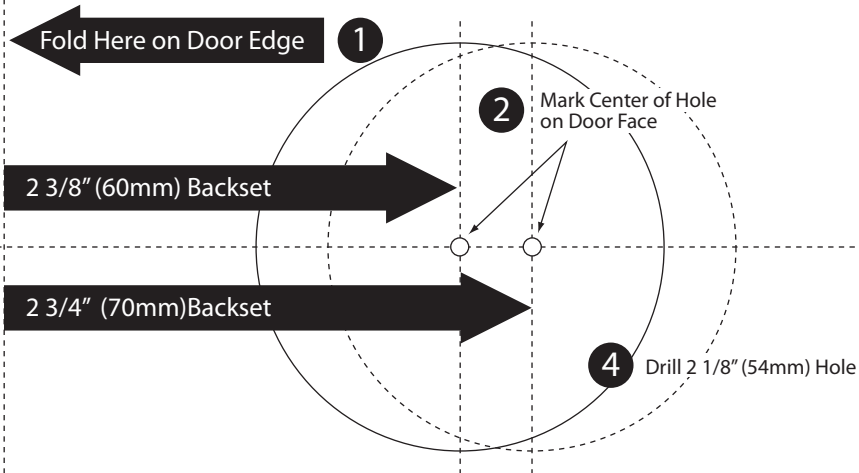

NOTE: The UltraLatch® requires a precisely located 9/32" screw hole perpendicular to the door face above the 2-1/8" face hole.

To locate this hole, follow steps 7 and 7a on the instruction sheet.

We highly recommend purchase of the optional UltraLatch® Drill Guide to help ensure proper location of this hole.