Cutlery/Spice/Utility Tray Insert



STEP 1: Using a table saw cut width of insert to fit inside of drawer.

STEP 2:

Cut back of insert off to fit from inside front to rear of the drawer.


STEP 3:

Place inside drawer.

Sink Base Door Storage



STEP 1: Measure width between center of door frame rails



DOOF

STEP 2:

Transfer this measurement to rack and tighten adjustable mounting brackets.

STEP 3:

Mark hole locations and fasten to door

REV·A·SHELF® Wood Classics

Installation Instructions

We hope you enjoy your new wood accessories from Rev-A-Shelf. We pride ourselves in providing the best quality, service and innovation in the industry. If you have any questions about our products, feel free to call our Customer Service Specialist at 800-626-1126



2409 Plantside Drive Jeffersontown, KY 40299 502-499-5835 • FAX: 502-491-2215 www.rev-a-shelf.com

I-WOOD 11-05

DM Spice Rack 4SR-15, 4SR-18, 4SR-21



STEP 1: Measure DOOR width between center of door frame rails.

STEP 2:

Transfer this measurement to rack and tighten adjustable mounting brackets.



and fasten to door.

Note:

4SR requires 4¹/2" of clearance behind door. Existing shelves must be modified to allow space for these bins. 41/2"

Adjustable Spice Rack 4ASR-15, 4ASR-18, 4ASR-21

Adjustable Mounting Brackets

STEP 1:

See accompanying insert.

Note:

4ASR requires 4¹/₂" of clearance behind door. Existing shelves must be modified to allow for these bins.



Hook that holds the trays to the standards. Two on each tray already attached to the back.

DM Cutting Board 4DMCB-15, 4DMCB-18



STEP 1: Measure width between center of

		DOOR


Pivot-Out Spice Rack 4PSR-18, 4PSR-21





door frame rails.

STEP 2: Transfer this measurement to rack and tighten adjustable mounting brackets.



STEP 3: Mark hole locations and fasten to door.

Drawer Cutting Board/Knife Rest 4KCB-18, 21, 24



STEP 1: See accompanying insert. Uses Full-Extension Ball-Bearing Slides.






Note:

Includes magnetic latch. Install if needed.

STEP 1: Remove or adjust any existing interior shelving

STEP 2: Attach hinge to spice rack.

STEP 3: Attach hinge to cabinet frame opposite side from door hinges.

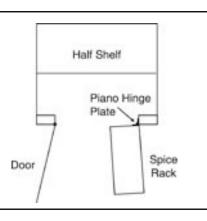

Bottom Mount Waste Containers



Your Wood Classic Series Accessory has been shipped fully assembled for ease in installation.

First remove the container(s) from the wood assembly, place the wood frame inside your designated space for installation. In the closed position, mark the four screw locations.

If sufficient clearance, install the front 2 screws, making sure the wood frame is square with the



front of the cabinet. **FIGURE A** If sufficient clearance, proceed to install the rear

refer to enclosed RV Series Door Mount Instruction Sheet for door mounting.

If sufficient clearance is not available, pull the framework completely out and on the outside of each slide, you will find a black trigger (figure A), which releases the slides and disassembles the framework from the floor mounted slides. Remove the wood frame, line up rear screw locations with your pencil marks and install the rear screws. Then re-assemble the wood frame.



STEP 1:


Center the tri-slides in cabinet and attach with screws.

STEP 2:

For door mounting, utilize the adjustable mounting brackets provided on front of unit.



2 screws and

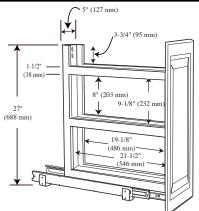

Depth of Unit (closed): 22-3/8" (569 mm)

Wood Lazy Susans Full Circle

STEP 3: [Chrome rails are provided to press fit into the predrilled holes on the sides of each shelf.



Top Mount Waste Containers

Each unit comes with a detailed instruction sheet for an easy install.



Pound Slides


Wicker Baskets



Rev-A-Shelf Wood Classic Wicker Baskets come with rails that can be cut to your desired width. Standard Rails are 2" in width, Euro Rails - 1-1/8"

Due to various applications, screws are not included.

Clear Polymer inserts to prevent contact with wicker when using basket for fruit or cloth items.

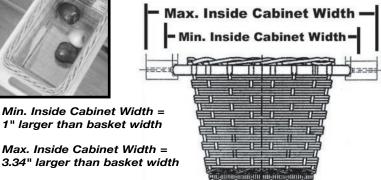

Euro Max. Inside Cabinet Width = 1.57" (39.9 mm) larger than basket width

Wood Lazy Susans Kidney Shaped



4WLS401-24-52 Tray Only 4WLS401-28-52

4WLS001-18-52 Tray Only 4WLS001-28-52



STEP 1:

See template for placement and instructions.

4WLS001-32-52

4WLS001-18-8 **Bulk Trays** 4WLS001-28-8 4WLS001-32-8


4WLS021-18-52 4WLS021-28-52 4WLS021-32-52

4WLS072-18-52 **Two Trays** 4WLS072-28-52 w/ Hardware 4WLS072-32-52

4WLS073-18-536 Three Trays w/ long post

Single Tray

w/ Hardware

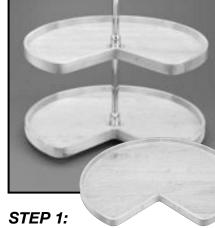

See template for placement and instructions.

4WLS401-32-52

4WLS401-24-8 **Bulk Trays** 4WLS401-28-8 4WLS401-32-8

Single Tray 4WLS421-24-52 4WLS421-28-52 w/ Hardware 4WLS421-32-52

4WLS472-24-52 **Two Trays** w/ Hardware 4WLS472-28-52 4WLS472-32-52